

Assembling a floor



Open the zip.



Raise the central pole slightly and spread the floor out around it. The zip cover must face downwards.



Attach the floor to the fabric.



Attach it like this.



Stretch the floor by tightening the floor tensioners on the outside.

