


# Mounting the canopy onto the Nordic tipi



The canopy's fastening is connected to the Nordic tipi's accessory sleeve. The eyelet and cord are used when the canopy is put up as a freestanding shelter, see the pictures on the opposite page.



1. Attach the canopy to the accessory sleeve. Press firmly all along the Velcro strips. The canopy is mounted on the right so that rain water is led away from the tent opening.

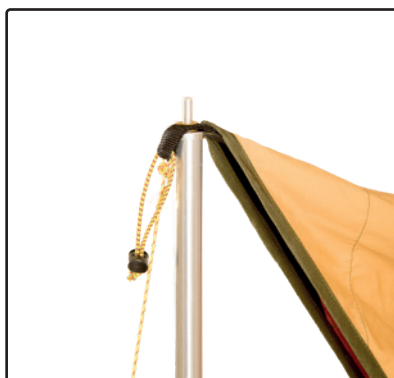

2. Pull the eyelet at the front end of the canopy over the end of a telescopic pole and peg the cord to the ground. Canopy 7/9 has three poles.



3. Peg the other cords to the ground. Adjust and tighten so the canopy fits snugly against the tent.



Canopy 5/7 is mounted using a telescopic pole and a cord and is tightened using another four cords.



Canopy 7/9 is mounted using three telescopic poles plus cords and is tightened using two or four more cords.

The canopy is not intended to resist strong winds and snow. The exceptional storm resistance of a Tentipi® Adventure Nordic tipi is maintained by the canopy being designed so that it can easily be removed in bad weather.

# Freestanding canopy

Putting up the canopy as a shelter or freestanding



## Shelter

First of all, put a tent peg in the band loop on the side opposite the side with the Velcro fastening. Push the end of a telescopic pole through the eyelet by the Velcro fastening and adjust it to a suitable height. Peg the cord down and tighten it. Place tent pegs along the long sides. Canopy 5/7 has band loops for two tent pegs on each side while Canopy 7/9 has band loops for three tent pegs on each side.



Canopy 5/7 put up as a shelter



Canopy 7/9 put up as a shelter

## Freestanding canopy

It is easier to be two people when putting up the canopy like this. One person pushes a telescopic pole through the eyelet by the Velcro fastening and pegs the cord to the ground. While the same person holds the telescopic pole upright, the other person attaches a telescopic pole plus cord on the opposite side. For size 7/9, two poles are needed on this side and it is also possible to put a third telescopic pole here, in the same way as when the canopy is mounted onto the Nordic tipi. The cords on the long sides are pegged down and all cords are then adjusted using their tensioners. Canopy 5/7 is fixed in place using two cords on each long side while for Canopy 7/9, it may be enough with one cord on each side, thanks to the extra telescopic pole.

There are two cords on each long side of Canopy 7/9 as well which can be used if more stability is required.



Canopy 5/7, lightweight model, put up as a freestanding canopy



Canopy 7/9 put up as a freestanding canopy